

① Standard Unit includes:

- 8-Differential Input Channels:
4 voltage, 4 current
- LCD Display
- Scope Mode®
- Meter Mode
- Battery Pack
- Battery Charger/Eliminator
- Internal Memory
- Stand/Panel Hook
- Protective Rubber Boot
- Voltage Cable Set/Carry Pouch
- VCP-4300 (Voltage Cable Pack)
- User Guide

② TASKCard® Options Requires Selection from TASKCards Below

TASKCard® PQLite / H-T-E-M	Measure, Record and Analyze: Harmonics, Transients, Energy and Memory Functions
TASKCard® PQ-DAQ	Multimode data acquisition, power quality, inrush/fault recording and data logging
TASKCard® 808/ H-M	Measure, Record, and Analyze: Power • Demand/ Energy • Harmonics • Timeplots and Reports • Demand/Energy Limits • Memory Card Slot • Easy Start™ Feature Not compatible with 32 MB Flash Memory Card

③ Standard Accessories

Current Probes and Cables

AC Current Probes

- TR-2510 (0.1 to 10A)
- TR-2500 (10 to 500 A)
- TR-2520 (300 to 3000A)
- TR-2021 (1 to 30A)
- TR-2019B (1 to 300A)¹
- TR-2022 (10 to 1000A)¹
- TR-2023 (10 to 3000A)¹
- ISO-658-5 (0 to 5 A)¹
- CA4300 Cable Adapter
- LEMFLEX-RR3035A (30/300/3000A)²
- LEMFLEX-RR6035A (60/600/6000A)²
- CA4300LEM Cable Adapter
- CA4CHLEM-AC-US 4-Phase Power supply (Power supply and adapter for up to four probes, not suitable for use with LPC-4300)

¹Requires Cable Adapter CA4300

²Available in 24", 36", 48" lengths; Requires CA4300LEM Adapter

AC/DC Current Probes

- PR150/SP2 150A CT (9v Battery Powered)
- PR1500/SP8 1500A CT (9v Battery)
- PR150/SP1 150A CT (AC Powered 115v)
- PR1500/SP7 1500A CT (AC Powered 115v)
- T402-P5P-ND Single Clamp Power Supply
- RR/PS/4A Probe Adapter Cable
- RR/PS/4A Probe Adapter Cable (for powering four probes)

SRAM Memory Cards and Readers

- MCR-R (Serial Port)
- MCR-P (Parallel Port)
- MCR-B (Plug-in Card)
- Card-2M (2 MB Memory)
- Card-4M (4 MB Memory)

Compact Flash Memory Cards and Readers

- 32 MB Flash Memory Card w/ Adapter
- 64 MB Flash Memory Card w/ Adapter³
- 128 MB Flash Memory Card w/ Adapter³
- FlashReader-USB
- FlashReader-P (Parallel Port)

³Only for TASKCard PQ-DAQ

④ PC Software

DRAN-VIEW® 4300 Package reads data from memory card or Dran-Link 4300 Communications Software. DRAN-LINK® 4300 is included with RS 232 Port Adapter. Specify DRAN-VIEW® 4300 Package includes utility drivers for PQLite TASKCard and TASKCard 808. Windows 3.1, Windows 95, 98, ME, 2000, XP and NT compatible. Also includes Report Writer, Dran-Set and Harmonics analysis tool.

⑤ Optional Accessories

- SCC-4300 (Soft CarryingCase)
- RSC-4300 (Reusable Ship.Cont.)
- BP-4300 (Battery Pack)
- XBC-4300 (Ext. Battery Charger)
- PFP-4300 (Portable Field Printer)⁴
- RS 232 (Port Adapter/Dran-Link)
- PCMCIA Flash Card Adapter
- LPC-4300 (Lockable Environmental Enclosure)
- CTIC-LPC-4300 (CT Interface Cable Set for LPC)
- Video 4300 (Training Video) CD or VHS
- Jumper Cable Set
- FVA-1 (1-Channel Fuse Voltage Adapter)
- FVA-4 (4-Channel Fuse Voltage Adapter)

⁴Requires RS-232 Port Adapter

⑥ Operational/Technical Training

Call for course description and schedule

Single Phase 4300 Package includes:

- Standard Unit
- Single Phase PQLite H-T-E-M TaskCard
- DRAN-VIEW® Single Phase PQLite PP4300 Version 5.0
- 32 MB Flash Memory Card w/ Adapter
- TR-2510 0.1-10A CT Current Probe or TR-2500 10-500A CT
- SSC-4300 Soft Carry Case
- VCP-4300 Voltage Cable Accessory Pack

NOTE: No substitutions allowed in Package